

# Two-Piece Bolt-Through Diaphragm Kit 24V244

407092B

EN

Husky® 2200 Diaphragm Pumps




## Important Safety Instructions

Read all warnings and instructions in the Husky® 2200 Air-Operated Diaphragm Pump Repair/Parts manual. Save all instructions.

## Ref. Description

| Ref. | Description                     | Qty. |
|------|---------------------------------|------|
| 12   | DIAPHRAGM, PTFE                 | 2    |
| 13   | DIAPHRAGM, backup, Santoprene   | 2    |
| 302  | TOOL, diaphragm install         | 1    |
| ---- | ADHESIVE, anaerobic (not shown) | 1    |

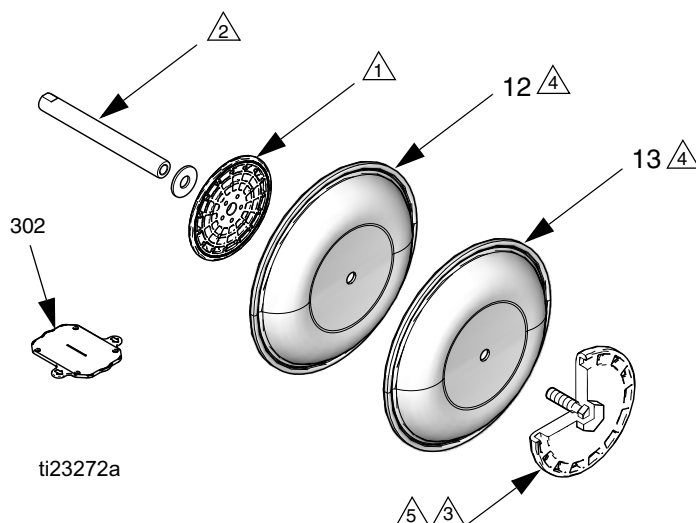

- △1 Rounded side faces diaphragm.
- △2 Apply lithium-based grease.
- △3 Torque to 100-105 ft-lb (136-142 N•m) at 100 rpm maximum.
- △4 AIR SIDE markings on diaphragm must face center housing.
- △5 Apply primer and medium-strength adhesive (supplied) to shaft side threads.